


Dan-Inject Instruction, cleaning the syringe.

After releasing any remaining air from the air chamber. Hold the dart horizontally with the black plunger upwards, fit a coupling to a filler syringe and fill the dart with water.

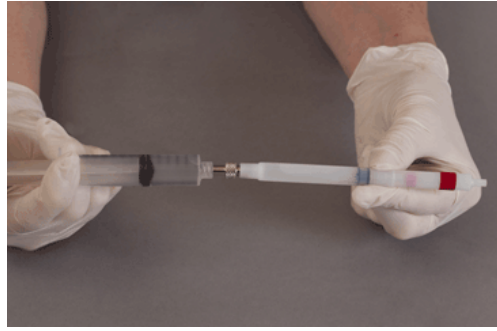

Flush the drug chamber with warm water. Repeat this step several times.
The syringes must not be sterilised by steam or have heat applied to them.

